

# ZEN Air Blue

## Quick Start Guide

Sample Rate




Pairing



Codec



### 2 Bluetooth Pairing

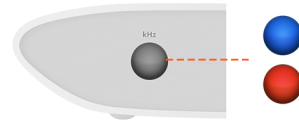


Blinking Blue-Red

Single-ended RCA output



DC Power 5V

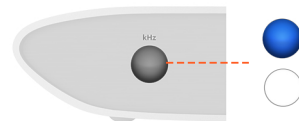


Solid Blue or White

### 1 Power



DC 5V

### 3 Output

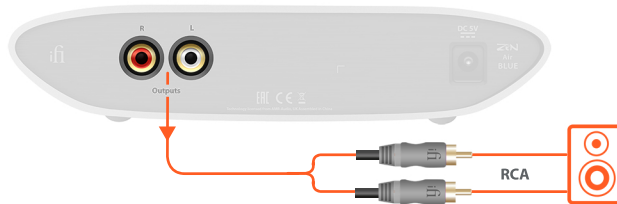

RCA



Before using ZEN Air Blue, review the ZEN Air Blue User Manual at <https://ifi-audio.com/product-guides/>